



**morning
industry, inc.**

INSTALLATION SHEET

HKK Lock Sets

A Back Module

B Back Module Battery Cover
(screw included but not shown)

C Front Assembly
(batteries not included)

D Door Latch


E Back Mounting Plate

F Screw Driver
screws included

G 2 keys



Step 1
Press & slide Adjustable Center Piece to required backset. (See above settings).

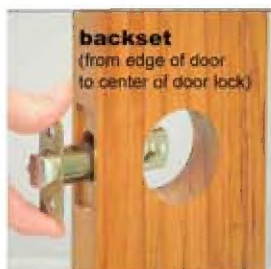

Step 2
Install latch into the side of door.



Step 3
Mount Front Assembly on door, routing wire loom UNDER latch and assuring Square Tube is face up.



Step 4
Install Back Mounting Plate (arrow showing) & route wire loom through rectangular hole.



Step 5
Connect wire loom from Front Assembly to Back Module.



Step 6
Fasten Back Module to the Back Mounting Plate. DO NOT OVER TIGHTEN. Install premium alkaline batteries.



Step 7
Fasten Battery Cover to Back Module.